





Zonotech Firmware Update Instructions

To update the firmware on your Zonotech:


1. Power on Zonotech and connect a Cat 5e cable from the **Computer Ethernet** port on Zonotech to an Ethernet router/switch that has a DHCP server running.
2. Press the **Info** knob on the front panel of Zonotech until the **Wired Network Setting** is displayed.

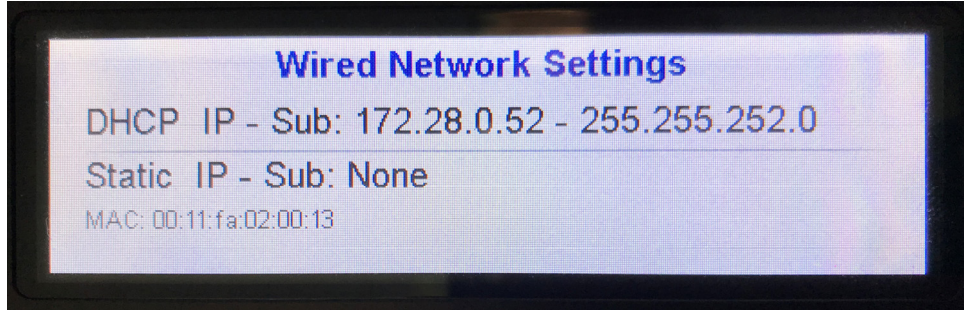

 
3. Open a web browser (on the computer that is connected to the same router/switch from step 1) and type in the following IP address: **http://172.28.0.52**.



4. On the **Master Outputs** web page, press the **Login** button.

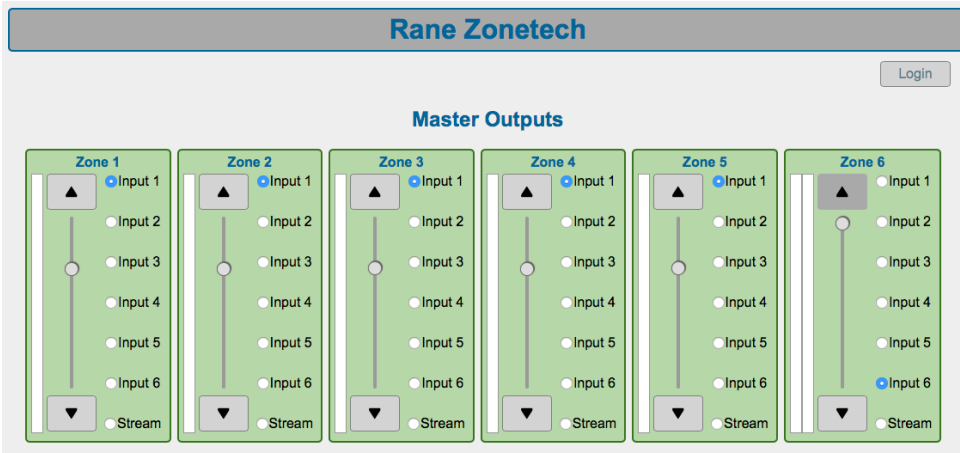

5. At the Login prompt, type the default password **admin** and press the Login button.

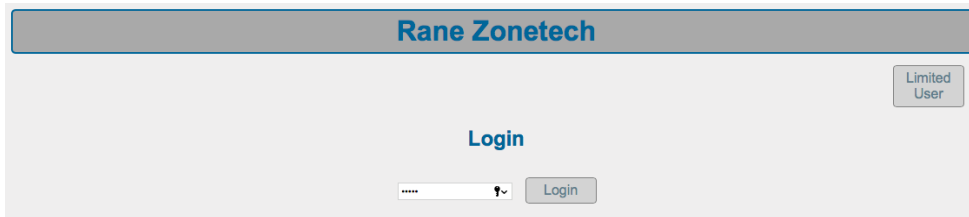



6. Press the **Settings** button to go to the settings page. Click the download icon under the **Firmware Update** section and select the latest Zonotech firmware update file.

IMPORTANT: During the update process, **do not** power off Zonotech or disconnect it from the power outlet. Doing so can damage the unit.

Rane Zonotech

Input 1 Input 2 Input 3 Input 4 Input 5 Input 6 Stream Page Logout

Zone 1 Zone 2 Zone 3 Zone 4 Zone 5 Zone 6 Master

Naming **Settings**

Settings

Device Information

Firmware Version: Serial Number: EP00004

Wired Network Settings

DHCP IP: 172.28.0.52 Sub: 255.255.252.0

Static IP: Sub: Apply

MAC: 00:11:fa:02:00:13

Wireless Network Settings

Enable:

SSID: Password: Status: Disconnected

DHCP IP: Sub:

Static IP: Sub: Apply

MAC: 00:90:4c:11:22:33

Security Levels

Web interface passwords: Front panel security level:

Full Access: Full Access

Limited Access: View-only Access

When a password is empty, users will automatically be logged in at that level Limited Access

Configuration

Firmware Update

7. Press the **Update firmware** button to start the update.

Rane Zonotech

Input 1 Input 2 Input 3 Input 4 Input 5 Input 6 Stream Page Logout

Zone 1 Zone 2 Zone 3 Zone 4 Zone 5 Zone 6 Master

Naming **Settings**

Settings

Device Information

Firmware Version: Serial Number: EP00004

Wired Network Settings

DHCP IP: 172.28.0.52 Sub: 255.255.252.0

Static IP: Sub: Apply

MAC: 00:11:fa:02:00:13

Wireless Network Settings

Enable:

SSID: Password: Status: Disconnected

DHCP IP: Sub:

Static IP: Sub: Apply

MAC: 00:90:4c:11:22:33

Security Levels

Web interface passwords: Front panel security level:

Full Access: Full Access

Limited Access: View-only Access


When a password is empty, users will automatically be logged in at that level Limited Access

Configuration

Firmware Update



- The firmware update progress will be shown on the web page and on Zonotech's display.

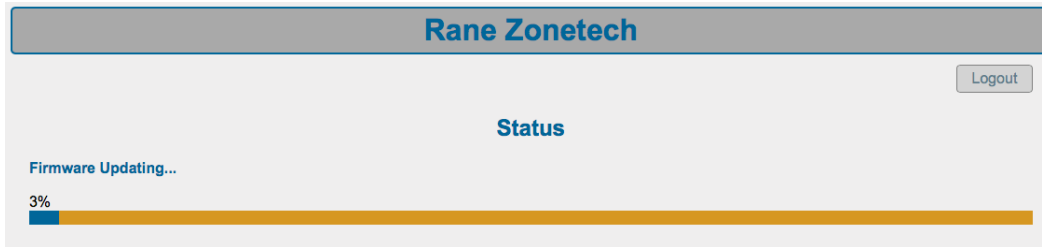

- Once the update reaches 100%, Zonotech will automatically reboot with the new firmware installed.

Technical Support

For additional help, visit ranecommercial.com/support.