

### CONTENTS

<b>Quick Start</b>	<b>2</b>
<b>Front Panel Description</b>	<b>3</b>
<b>Rear Panel Description</b>	<b>4</b>
<b>Working with Smart Remotes</b>	<b>5</b>
<b>SR 4 Wiring Guidelines</b>	<b>10</b>
<b>SR 4 Communication Protocol</b>	<b>18</b>
<b>Smart Remote Specifications</b>	<b>28</b>
<b>Factory Authorized Service</b>	<b>30</b>
<b>Limited Domestic Warranty</b>	<b>30</b>
<b>Warranty Procedure in USA</b>	<b>32</b>
<b>Declaration of Conformity</b>	<b>34</b>



### FCC Statement

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by Rane Corporation could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.



### Quick Start

How many knobs does it take to turn on eight green LEDs? One...but at least read this section to avoid unwelcome jokes.

**Architectural look.** Since Decora plates come in different colors, each SR 4 is shipped with 3 different color labels for installation behind the lens (we ship them without an insert installed). Colors included are white (w/ black logo), almond (w/ black logo) and black (w/ white logo) which accommodate most applications. The label has a transparent window so custom selection lists can be seen. Custom selection lists are easily created using a Microsoft Word™ template or the SR Label Maker application included on the Drag Net CD-ROM or downloadable from [www.rane.com/smart.html](http://www.rane.com/smart.html).


**Address.** Set the Device Address rotary switch on the side of the SR 4; addresses from 0 through 7 are valid. Each device connected to the same RS-485 bus must have a unique address.

**Wiring.** Use CAT 5 cable with a minimum of 2 twisted pairs to connect to the SR 4. The use of DOG 4 cable may cause random barking in high traffic areas (sorry, couldn't resist). Connect one twisted pair of wires to the “-V” and “+V” terminals: “-V” must connect to the power supply ground and “+V” must connect to +8 to +15 volts. Connect the second twisted pair of wires to the “A” and “B” terminals: “A” connects to the RS-485 “data +” connection and “B” connects to the RS-485 “data -” connection. When shielded CAT 5 cable is used, a chassis terminal is provided for shield termination.

**Setup software.** The SR 4 is configured using Drag Net software included in the box or available at [www.rane.com/dragnet](http://www.rane.com/dragnet). See “Working with Smart Remotes” on page 5.

**WEAR PARTS:** This product contains no wear parts.

## Front Panel Description

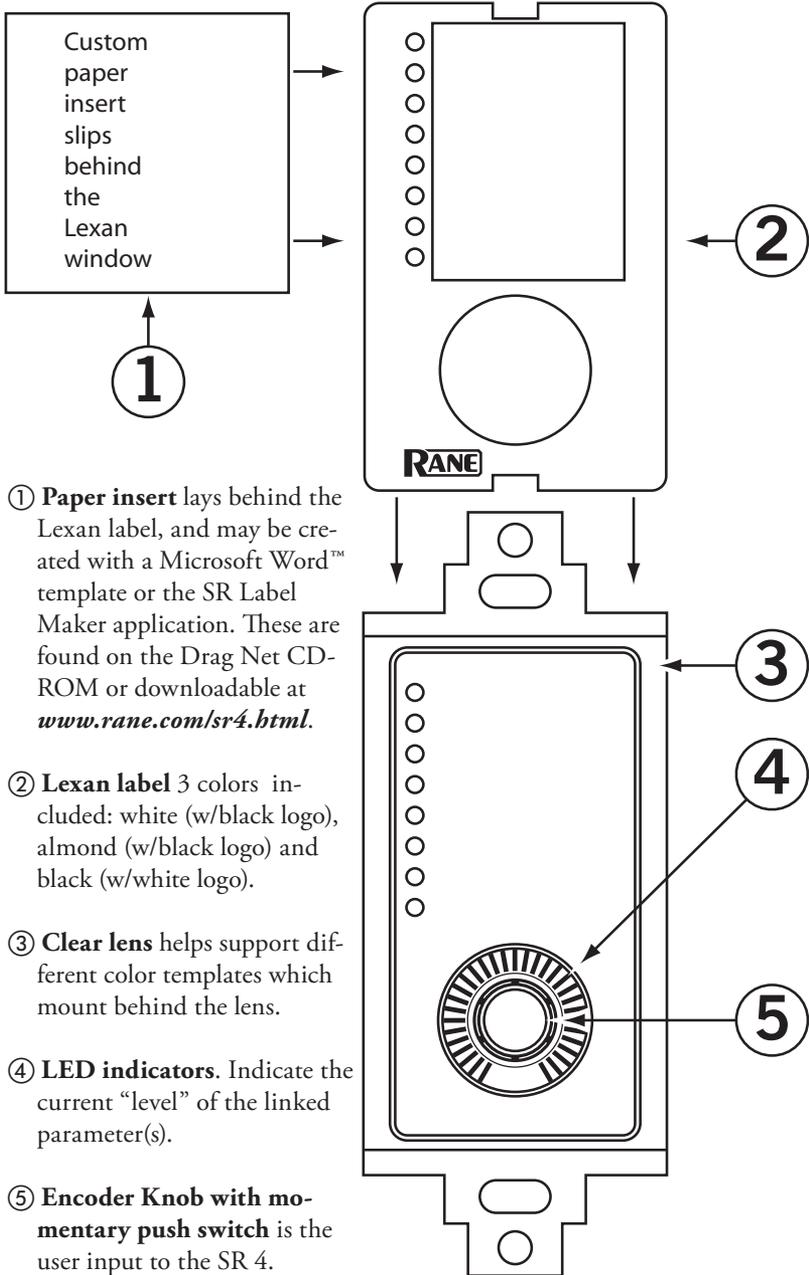

① **Paper insert** lays behind the Lexan label, and may be created with a Microsoft Word™ template or the SR Label Maker application. These are found on the Drag Net CD-ROM or downloadable at [www.rane.com/sr4.html](http://www.rane.com/sr4.html).


② **Lexan label** 3 colors included: white (w/black logo), almond (w/black logo) and black (w/white logo).

③ **Clear lens** helps support different color templates which mount behind the lens.

④ **LED indicators.** Indicate the current “level” of the linked parameter(s).

⑤ **Encoder Knob with momentary push switch** is the user input to the SR 4.

## Rear Panel Description

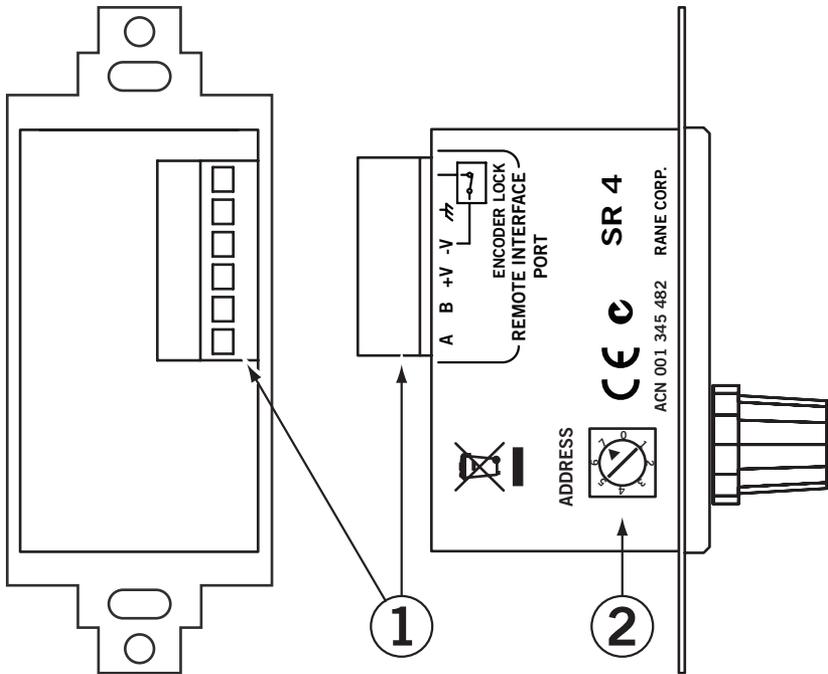

- ① **6-wire Euroblock connector.** Connects the SR 4 to a controller. **A** connects to RS-485 data +, **B** connects to RS-485 data -. **+V** is the positive side of the power supply rail. **-V** is the negative/ground side of the power supply rail. Ground is the connection point for the shield when shielded cable is used. When the Encoder Lock pin is grounded and Auto Lock is enabled, encoder input is ignored by the SR 4. This, for example, allows a keyed switch to be installed next to the SR 4 that allows the device to be “locked” so only keyholders can change system volume.
- ② **Device Address switch** to assign the device its RW 485 address. Addresses 0 through 7 are valid.

# Working with Smart Remotes

## Smart Remote Overview

Smart Remotes are configured within Drag Net 4 and higher. The following sections describe configuring the various parameters and modes for the remotes themselves. Details on assigning remotes to control parameters and functions with an RPM are found in Drag Net's included Help file (Help > Help Topics).

## Creating a new Configuration

Smart Remote configurations can be created as offline Storage files, for subsequent transfer to a Live remote. To create a new Smart Remote Configuration:

1. Click the **File** menu, choose **New**, then select **Configuration** (CTRL + N).

- or -

Click the **New Configuration** button in the standard toolbar.



- or -

Right-click within the Project window and select **New**, then **Configuration** (CTRL + N).

2. Select the configuration source, either from an empty configuration, or from an existing Rane- or User-defined template. Select a device type from the **Configuration Type** list to filter the list of file options (to only show SR 3 files in the User Template directory, for example). Selecting the **Copy Settings** check box copies all parameters to the new configuration. This is a particularly useful feature when creating new configurations based on existing User Templates.

3. Select a configuration type (SR 2, SR 3, SR 4) from the list of choices.

4. Click **Next**

5. Enter a Name, storage location on your hard drive, and brief description of the configuration.

6. Click **Finish** and start configuring the remote!

File extensions for Smart Remote configurations follow the remote type – SR 4 configurations are stored as .sr4 files, for example.

Each remote has a number of configuration parameters which determine basic functions and user operation modes. These parameters are stored locally on each remote in non-volatile memory.

## SR 4 Configuration Parameters

The SR 4 features a 31-position LED indicator, rotary data encoder with integrated push switch, and a column of eight green LED indicators for selection status. Custom selection lists are easily created using the included Microsoft Word template or SR 4 Label Maker application. The printed list is then placed beneath the transparent window of the SR 4's faceplate insert, and held firmly in place by a plastic lens.

### Auto Lock

Auto Lock is used in conjunction with the SR's Encoder Lock pin to disable the SR encoder. When the Encoder Lock pin is grounded and **Auto Lock** is enabled, changes in position of the encoder are ignored by the SR. For example, a keyed switch installed next to the SR allows the device to be locked temporarily so the system volume can not be adjusted.

### Knob Turn

When **Auto Level** is enabled and the encoder is turned normally (without pushing it in) the LED moves clockwise or counterclockwise one position in the direction the knob was turned. Always enable **Auto Level** when using a Smart Remote with a Rane RPM device.

### Knob Push & Turn

When **Auto Selection** is enabled and the encoder is held in and turned, the vertical selection LED moves vertically amongst the choices.

When **Selection Roll** is enabled the selection wraps around from last to first (or first to last, depending on the direction the encoder was turned).

When **Update on Release** is enabled, the SR updates its Selection index when the encoder is released, rather than updating each time the encoder is turned. This feature allows users to scroll through selections, choose the selection they want, then release the encoder to trigger the action (for example, recall a Preset on an RPM 88).

### Knob Bump

When **Auto Selection** is enabled and the encoder is pressed in and released (without turning), the next Selection is automatically chosen; the Selection index is updated after the Update Timer expires. Note: Selections automatically roll from last to first while in Bump mode.

The **Update Timer** determines how long the SR 4 waits before updating its Selection index once the encoder is released. Setting this value to 0 updates the index instantly, with every press/release combination of the encoder. Increasing this value allows users to scroll through and preview selections without updating the index on every press. The valid range for the timer is 0 to 5 seconds.

## Max Num Selections

**Max Num Selections** limits the number of selections accessible by the user. For example, if Max Num Selections is set to 4, the user is only able to access Selections 1 to 4, even though there are 4 other Selections (total of 8) stored on the SR 4. Max Num Selections only applies when an **Auto Selection** mode is enabled.

## Polling for Remotes

### Ethernet versus Serial Communication

If Smart Remotes are connected to an RPM device, the RPM acts as a data bridge, allowing communication with the remote through the Ethernet connection to the RPM. Smart Remotes appear beneath the RPM device in the Live folder of the Project window.

Serial communication takes place through the PC's COM port, which is usually RS-232 and therefore must be connected to the SR using an RS-232 (unbalanced data) to RS-485 (balanced data) converter capable of supporting the desired baud rate. Select the COM port connected to the SR from the list of available ports when polling for Live devices.

### Baud Rate

The Baud Rate can only be set when Serial Mode is selected during polling. When configuring Remotes used with Rane controllers (i.e., RPM 88/44/22), the RW 485 baud rate of 38400 bps is automatically set. Should you encounter communication problems, settings can be restored to 38400 baud, 10 ms delay by holding the encoder in while powering the remote. Release the encoder when its LED lights.

## Transferring Configurations to and from a Live Remote

Remotes can be configured offline in Storage mode, then transferred to a Live remote when you get to the job site. Alternately, you can transfer the contents of a Live remote to an offline Storage configuration as a backup, or for editing when you're back in the comfy chair at the office.

### Storage to Live

Live remotes are initialized by transferring a Storage configuration to a Live remote. This action replaces all settings on the remote. Once the transfer is complete you can continue to work directly with the Live remote, adjusting mode parameters, inserting bitmaps (SR 3), and so on. Hint: You'll need to **Poll for Live devices** before transferring configurations. To transfer a Storage remote configuration to a Live device:

1. Toggle the Project Window on if it's not already visible (**View > Project**).
- 2a. Drag and drop the Storage configuration listed under the Storage folder onto a destination remote listed under the Live folder.
  - or -
- 2b. Select the Storage configuration, click the **Transfer Config To** button, and then select a destination remote from the list.
  - or -
- 2c. Right-click the Storage configuration and choose **Transfer To**, then select a destination remote from the list.

## Live to Storage

Important: Transferring from a Live remote to an existing Storage configuration overwrites the Storage configuration.

To transfer from a Live remote to a Storage configuration:

1. Toggle the Project Window on if it's not already visible (**View > Project**).
- 2a. Drag and drop the Live remote onto an existing destination Storage configuration.
  - or -
- 2b. Select the **Live remote**, click the **Transfer Config To** button, and then select a destination Storage configuration from the list, or choose to create a new configuration.
  - or -
- 2c. Right-click the **Live remote** and choose **Transfer To**, then select the destination Storage configuration from the list, or choose to create a new configuration.

## Editing a Live Remote

It is possible to edit any parameter on a Live remote directly, without first having to transfer a Storage configuration to it.

To view the current contents of a Live remote simply double-click the remote listed under the Live folder of the Project Window. Alternately, right-click the **Live remote** and choose **Open item**. The contents of the Live remote are then loaded into the Device Configuration window for viewing and/or editing.

## Renaming a Remote

To rename a Smart Remote:

1. Right-click the **Live remote** in the Project window and choose Properties.
2. Enter a new name for the remote in the Name field.

## Updating Smart Remote Firmware

It may be necessary to update a Smart Remote's firmware in order to add features or address one of those pesky glitches that only seem to appear after the product's been released.

Remotes with the following firmware versions can be upgraded as new firmware becomes available:

<b>Remote</b>	<b>With Firmware Version</b>
SR 2	2.0 and higher
SR 3	4.0 and higher
SR 4	1.0 and higher

Older remotes may not be updateable, or updateable only by Rane. Contact Rane Tech Support 425-355-6000 or email us from [www.rane.com](http://www.rane.com) for more information.

Firmware files for all remotes are installed as part of Drag Net and are located in the Program Files\Rane Corporation\Drag Net\Firmware\Smart Remotes directory.

To update firmware in a Smart Remote:

1. Ensure remotes are properly connected to the RPM device. Remotes must be connected before powering the RPM on.
2. Connect directly to the RPM device, using an Ethernet crossover cable.
3. Poll to find the Live device. Remotes are listed beneath the RPM device in the Project window.
4. Select the Remote to be updated.
5. Launch the **Update Device Firmware Wizard** (Tools > Update Device Firmware).
6. Follow the wizard's on-screen instructions to complete the operation. The device automatically resets itself once the update is complete.

Firmware updates performed using a COM Port (Serial) follow the exact same steps, beginning with Step 3.

## SR 4 Wiring Guidelines

### Restrictions

24 AWG CAT 5 cable resistance = 26 ohms per 1,000 feet. There are two wiring restrictions. First, RW 485 has a maximum of 1,000 feet. The total length may not exceed this limit in any combination of series or parallel runs.


Second, the voltage of the power supply also affects the maximum distance of each length between, and the number of Remotes. Refer to the tables on the following pages depending on which wire, voltage, number of Remotes, and if you are using single or multiple runs.

### External Power Supply

The RPM 88's RW 485 port does not offer enough current to power more than six SR 4 remotes — an external DC supply must be used. Rane recommends using a 12 to 15 volt DC regulated power supply capable of delivering a minimum of 1 amp of current. The combined current draw on the RPM 88's RW 485 port and VOP cannot exceed 375 milliamps. [The RPM 44 and RPM 22, however, can power up to eight SR 4 remotes.]

Most installations will have a mix of SR 2, SR 3, and SR 4 remotes each with their own current requirements. To make calculation easy as to whether or not an external supply is necessary, a Microsoft Excel™ spreadsheet is available named SRXCABLELENGTH.XLS. This file is on the Drag Net CD-ROM, or downloadable from [www.rane.com/smart.html](http://www.rane.com/smart.html).



If you have a Radio Shack nearby, they offer a 15 volt 1 amp supply, catalog number: 273-1691. To ease installation, use a 6 foot Adaptaplug extension cable, Radio Shack catalog number 273-1641.

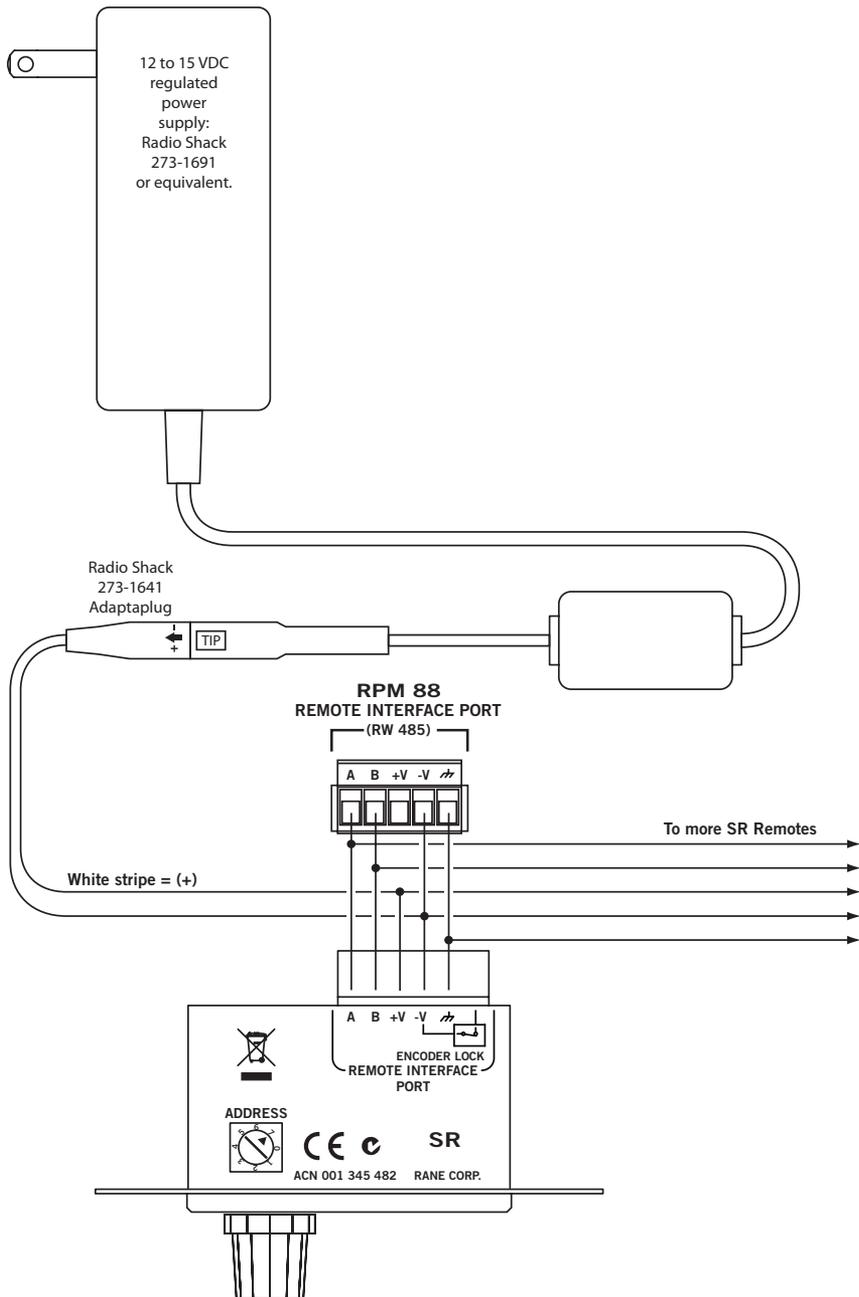

### Cable Type 1

2 twisted pair unshielded CAT 5, Belden #1588(A,R)

2 twisted pair unshielded CAT 5, Belden #1590A

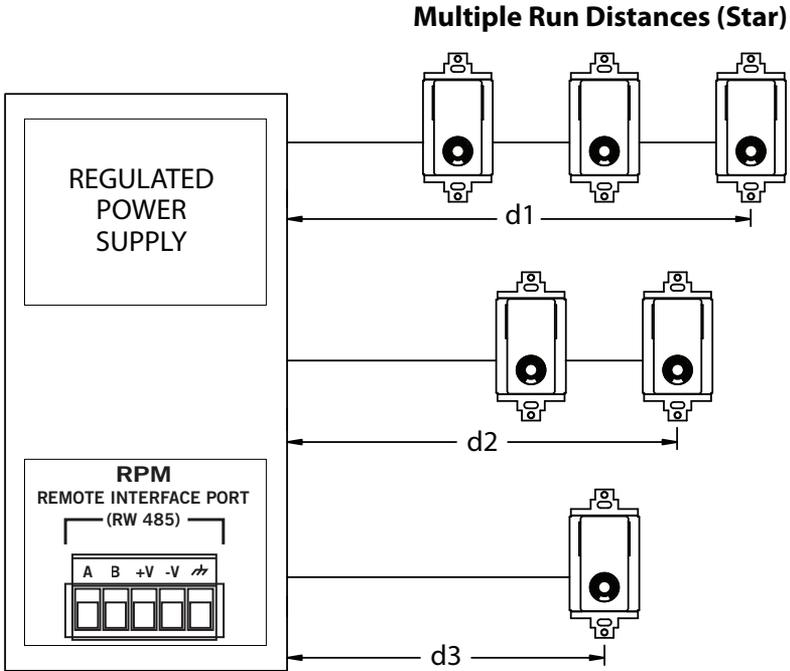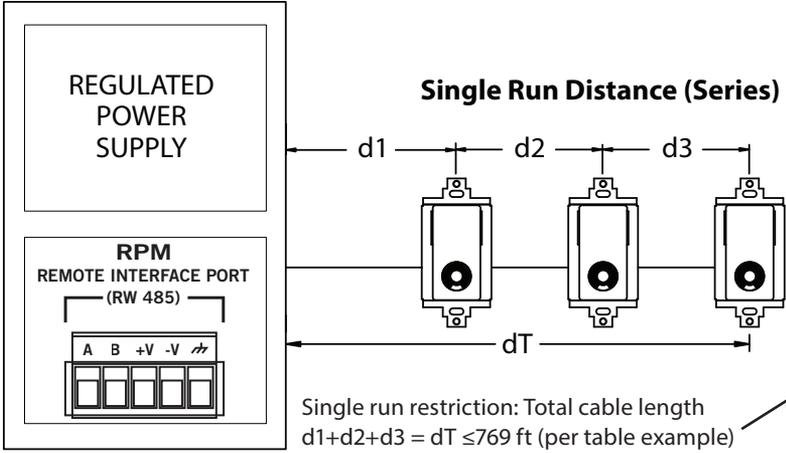

## Cable Type 1

2 twisted pair unshielded CAT 5, Belden #1588(A,R)

2 twisted pair unshielded CAT 5, Belden #1590A

	Max Distance for Cable (feet)	Max Distance for Cable (meters)	Number of SR 4 Remotes
<b>Vs = 15V</b> <b>RPM 44</b> <b>RPM 22</b>	1000	305	1
	1000	305	2
	769	235	3
	599	183	4
	490	149	5
	415	126	6
	359	110	7
	317	97	8

<b>Vs = 12V</b> <b>RPM 88</b>	1000	305	1
	672	205	2
	481	147	3
	374	114	4
	306	93	5
	259	79	6
	225	68	7
	198	60	8

Requires external supply




<b>Vs = 8V</b>	224	68	1
	134	41	2
	96	29	3
	75	23	4
	61	19	5
	52	16	6
	45	14	7
	40	12	8

Note: This table is *only* for systems using SR 4 remotes (all remotes on 485 bus are the same). For mix and match calculation of SR 2, SR 3 and SR 4 Remotes, use the SRCABLELENGTH.XLS Microsoft Excel™ spreadsheet on the Drag Net CD-ROM or at [www.rane.com/sr4.html](http://www.rane.com/sr4.html).

# Cable Type 1

Multiple run restriction (per table entries):  $d1 \leq 769$  ft,  $d2 \leq 1,000$  ft,  $d3 \leq 1,000$  ft  
 Total cable length must be under 1,000 ft:  $d1 + d2 + d3 = dT \leq 1,000$  ft

## RPM REMOTE INTERFACE PORT

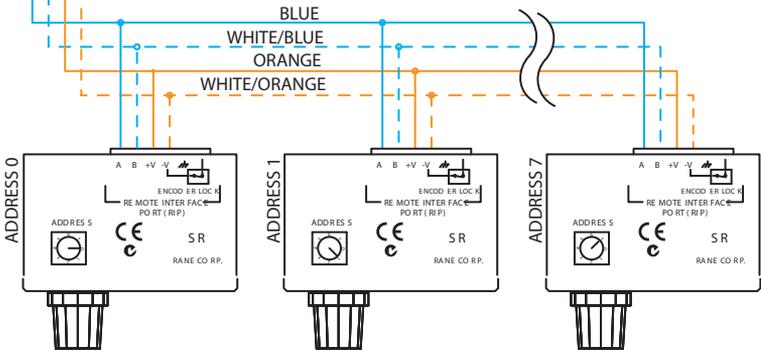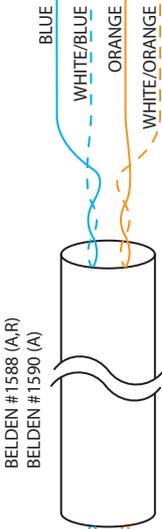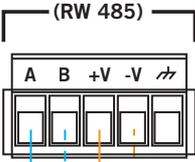

Examples:

*So if*

$d1=400$  ft ( $<769$  ft, OK)

$d2=300$  ft ( $<1,000$  ft, OK)

$d3=200$  ft ( $<1,000$  ft, OK)

$d1+d2+d3=900$  ft, then it's all OK!

*but if*

$d1=500$  ft ( $<769$  ft, OK)

$d2=400$  ft ( $<1,000$  ft, OK)

$d3=300$  ft ( $<1,000$  ft, OK)



$d1+d2+d3=1,200$  ft, then it's NOT OK!

## Cable Type 2

4 twisted pair unshielded CAT 5, Belden #1583(A, B, E, ENH, R)

4 twisted pair shielded CAT 5, Belden #1624 (P, R)

4 twisted pair unshielded CAT 5, Belden #1700 (A, R)

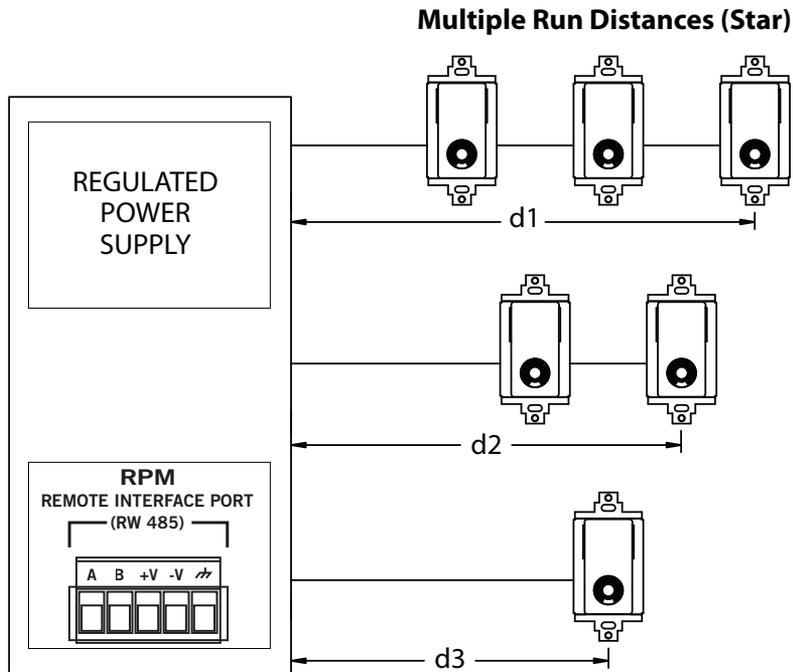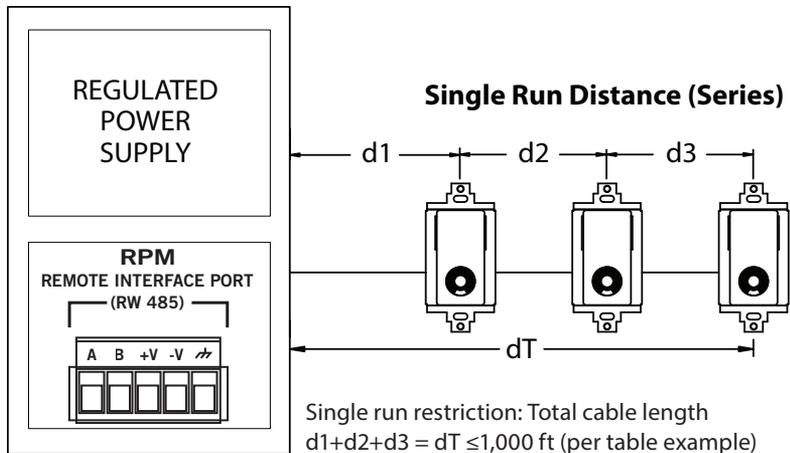

## Cable Type 2

4 twisted pair unshielded CAT 5, Belden #1583(A, B, E, ENH, R)

4 twisted pair shielded CAT 5, Belden #1624 (P, R)

4 twisted pair unshielded CAT 5, Belden #1700 (A, R)

	Max Distance for Cable (feet)	Max Distance for Cable (meters)	Number of SR 4 Remotes
<b>Vs = 12V RPM 44 RPM 22</b>	1000	305	1
	1000	305	2
	1000	305	3
	1000	305	4
	1000	305	5
	1000	305	6
	1000	305	7
	952	290	8

<b>Vs = 12V RPM 88</b>  Requires external supply	1000	305	1
	1000	305	2
	1000	305	3
	1000	305	4
	919	280	5
	778	237	6
	674	205	7
	595	181	8

<b>Vs = 8V</b>	671	205	1
	403	123	2
	288	88	3
	224	68	4
	184	56	5
	156	47	6
	135	41	7
	119	36	8


Note: This table is **only** for systems using SR 4 remotes (all remotes on 485 bus are the same). For mix and match calculation of SR 2, SR 3 and SR 4 Remotes, use the SRCABLELENGTH.XLS Microsoft Excel™ spreadsheet on the Drag Net CD-ROM or at [www.rane.com/sr4.html](http://www.rane.com/sr4.html).

## Cable Type 2

More conductors mean greater operating distance.

Multiple run restriction (per table entries):  $d_1 \leq 1,000$  ft,  $d_2 \leq 1,000$  ft,  $d_3 \leq 1,000$  ft

Total cable length must be under 1,000 ft:  $d_1 + d_2 + d_3 = d_T \leq 1,000$  ft

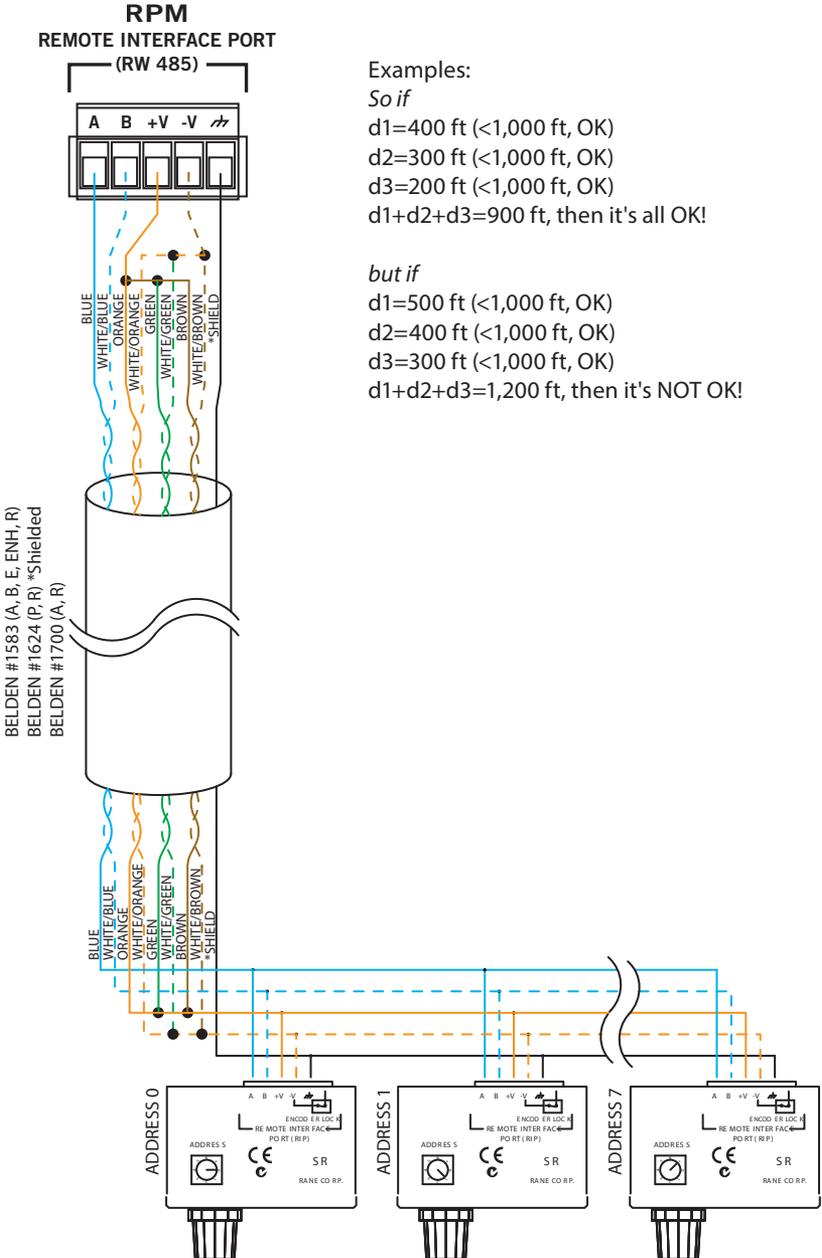

## SR 4 Communication Protocol

The SR 4 communication protocol follows Rane's RW 485 specification. The following describes the SR 4 implementation.

### Physical

The baud rate is 38,400 bps with No parity, 8 Data Bits, 1 Stop Bit (N81) format. The SR 4 also supports 9600, 19200, 57600, and 115200 bps. When configuring Remotes used with Rane controllers (RPM 22, 44, 88), the RW 485 baud rate of 38400 bps is required. At the end of a command message, the Master must release the bus within 10 ms. The SR 4 waits this length of time before transmitting its response. To restore the SR 4 communication settings to 38400 baud 10 ms delay, apply power while pushing the encoder *in* for several seconds until the encoder LED illuminates.

### Master/Slave

RW 485 is a master/slave bus network, with only one master in charge, which we define as the Protocol Master (controller). When the Protocol Master expects a response from a slave, it relinquishes control of the bus, allowing the slave to drive the RS-485 bus.

The slave must then release the bus back to the Protocol Master, and we start again. The SR 4 is always a slave.

### Value Encoding

All numeric values are represented in ASCII decimal format separated by commas. Values with the MSB set (\$80 or larger) are interpreted as potential device addresses.

### Syntax

Command messages are sent from the Protocol Master to the SR 4. Response messages are returned to the Protocol Master from the SR 4. The SR 4 always responds to the Protocol Master upon receiving a complete command message at the correct baud rate.

#### **Command and response messages have the same format:**

**message = <addr> <msgtype> <devtype> <checksum> <command/data> <CR>**

**<addr>** Each device has a unique address in the range [0, 7]. The encoding is one byte with the MSB set.

For example, if the SR 4's address switch is set to 5, the controller would send 10000101. (\$5 + \$80)

The SR 4 always returns its address switch setting plus \$80. (\$addr + \$80)

The address switch must be set in the range [0, 7].

**<msgtype>** The msgtype is a one byte set of flags indicating options, bit 7=MSB:

- bit 0) set = checksum is valid
- bit 1) set = there has been an error (response only)
- bit 2-5) reserved, cleared to 0
- bit 6) always 1
- bit 7) always 0

If the controller wants the SR 4 to verify the checksum, it would send a value of \$41, or an ASCII 'A'. If the controller wants the SR 4 to ignore the checksum, it would send a value of \$40, or an ASCII '@'.

The SR 4 echoes back the **<msgtype>** it was sent. In the case of an error, the SR 4 sets bit 1.

**<devtype>** The SR 4 device type value is \$33, or an ASCII '3'. The SR 4 also accepts a value of \$30, or an ASCII '0', the universal device type used for polling.

The SR 4 always returns its device type of \$33.

**<checksum>** The checksum is defined as the sum of the ASCII encoded values of the **<command/data>** section. The sum is then masked with \$007F to produce one byte with the MSB set to zero.

The controller would send a valid checksum as defined above if it sent a value of \$41 for the **<msgtype>**. The SR 4 then verifies the sent checksum by calculating the checksum from the data it received in the **<command/data>** section of the sent message. On the other hand, if the controller sent a value of \$40 for the **<msgtype>** the SR 4 ignores the sent checksum. The controller must always send a checksum less than or equal to \$7F, even if it intends for the SR 4 to ignore it.

The SR 4 **<checksum>** response is based on the **<msgtype>** it was sent. If the SR 4 received a **<msgtype>** of \$41, it returns a valid checksum (as defined) calculated from its response data. If the SR 4 received a **<msgtype>** of \$40, it returns zero.

**<command/data>** The general format is <cmd1,arg1,arg2,...,cmd2,arg1,...>. The commas are part of the **<command/data>** structure and act as delimiters between the ASCII encoded commands and data. Concatenation of commands is limited to four commands. Text string arguments are delimited with quotes ("String"). If the string argument contains quotes, an accent character (') placed in the string argument will be interpreted by the SR 4 as a double quote character ("). The ASCII value for the accent character is \$60, not to be confused with a single quote character ('), ASCII value \$27. For example: string argument: "A string that contains 'quotes' " is interpreted as: A string that contains "quotes".

The controller sends commands/arguments for the SR 4 to process. This section of the message is limited to 40 characters for the SR 4. See the SR 4 Command Set section for details of valid commands.

The SR 4 responds with response data based on the commands/arguments it was sent. The SR 4 limits its response data to 40 characters. In the case of an error, the response data is: n,"ERROR" where n is an error code defined below:

Hex	ASCII	Error Code Meaning
\$31	'1'	Sent <devtype> invalid.
\$32	'2'	Sent <checksum> did not verify.
\$33	'3'	Sent <command/data> parse error.
\$34	'4'	Sent <command/data> greater than 40 characters, or the number of concatenated commands >4.
\$35	'5'	Response <command/data> greater than 40 characters.

See the **SR 4 Command Set** section below for details of valid SR 4 responses.

<CR> A carriage return (\$0D) terminates every message.

## SR 4 Command Set

This section details the <command/data> portion of a complete RW 485 message. The SR 4 supports 10 commands. Below is a table of commands and associated responses, followed by descriptions.

### Configuration Commands

Cmd	Arg(s)*	Description	Response**
V		Get Firmware, Hardware Version	n1,n2,"OK"
N	["ccc..."]	Read/Write Device's Name	"ccc...","OK"
SPL	n1[,n2]	Read/Write Stored Parameter	n,"OK"

### Input Commands

ILD	[n1]	Read/Write LED Enable	n1,"OK"
ILK	[n1]	Read/Write Input Lock	n1,"OK"
IQ		Input Query	n1,n2,"OK"
IR		Input Raw	n1,n2,n3,n4,"OK"
IS	n1,n2	Input Suggest	n1,n2,"OK"
ISR	n1,n2	Input Suggest Raw	n1,n2,n3,n4,"OK"
IF	n1,n2	Input Force	"OK"

\* [ ] denotes optional Command Argument

\*\* Responses from concatenated commands produce only one "OK"

## Configuration Commands

### V

Get Firmware, Hardware Version

Send: V

Response: n1,n2,"OK"

Where: n1 is a two digit ASCII encoded decimal value representation of the firmware version. The first digit is the major firmware version and the second digit is the minor firmware version.  
n2 is a one digit ASCII encoded decimal value representation of the hardware version.

Example: 13,2,"OK" means firmware version 1.3, hardware version 2.

### N

Read/Write Device's Name

The device's name is limited to 32 characters and is stored in non-volatile memory. The default name is SR 4.

To read the device's name:

Send: N

Response: "ccc","OK"

Where: ccc is the device's name.

Example: "SR 4","OK" means the device's name is SR 4

To write a new name to the device:

Send: N,"ccc"

Where: ccc is the new name.

Example: N,"Conference Room 101" will rename the device to Conference Room 101

Response: "OK"

### SPL

Read/Write Stored Parameter

Various configuration parameters are stored in non-volatile memory. This command reads and writes these parameters. For details of each parameter, see the **Stored Parameter List** section following the **Command Set** section.

To read a stored parameter value:

Send: SPL,n1

Where: n1 is the stored parameter index.

Example: SPL, 1 indexes the first parameter in the list which is the Auto Level parameter.

Response: n1,"OK"

Where: n1 is the value of the indexed parameter.

Example: 1,"OK" means that Auto Level is enabled.

To write a stored parameter value:

Send: SPL,n1,n2

Where: n1 is the stored parameter index.

n2 is the value to be stored.

Example: SPL,1,0 sets Auto Level parameter to 0, disabling the Auto Level function.

Response: "OK"

## Encoder Input Commands

### ILD

Read/Write Encoder LED Enable byte

Reads or writes the Encoder LED Enable byte.

To read the LED Enable byte:

Send: ILD

Response: n1,"OK"

Where: n1 is the Encoder LED Enable byte. The range is [0, 1].

Example: 1,"OK" means that the level LED indication is enabled.

To write the LED Enable byte:

Send: ILD,n1

Where: n1 is the Encoder LED Enable byte. The range is [0, 1].

Example: ILD,0 disables LED indication.

Response: "OK"

### ILK

Read/Write Software Input Lock

Reads or writes the input encoder software lock byte. The format of the lock byte is as follows: bit 0 set locks the level (no action when encoder is turned), bit 1 set locks the selection (no action when the encoder is pushed in and turned), bit 2 set locks the enter state (no enter command state change when the encoder is pushed and released without turning). This lock byte is volatile, meaning upon power up of the device the software lock byte is always cleared to zero.

To read the Software Input Lock byte:

Send: ILK

Response: n1,"OK"

Where: n1 is the Software Input Lock byte. The lock byte range is [0, 7].

Example: 3,"OK" means that both the level and selection are locked.

To write the Software Input Lock status:

Send: ILK,n1

Where: n1 is the Software Input Lock byte. The lock byte range is [0, 7].

Example: ILK,2 locks the selection.

Response: "OK"

## **IQ**

### **Input Query**

Returns the current level and selection. Resets the command state to No Operation.

Send: IQ

Response: n1,n2,"OK"

Where: n1 is the current level. The level range is [1, 31].

n2 is the current selection. The selection range is [1, 8].

Example: 15,4, "OK" means that the current level is 15 and the current selection is 4.

## **IR**

### **Input Raw**

Returns the current level, selection, command state, and the length of time the encoder button has been pressed. Resets the command state to No Operation.

Send: IR

Response: n1,n2,n3,n4,"OK"

Where: n1 is the current level. The level range is [1, 31].

n2 is the current selection. The selection range is [1, 8].

n3 is the current command state. The command state represents the state of the encoder.

The possible states follow:

- |    |                 |   |
|----|-----------------|---|
| 0  | No Operation    | The encoder has not changed.                                      |
| 1  | Encoder Left    | The encoder has been turned counter clockwise.                    |
| 2  | Encoder Right   | The encoder has been turned clockwise                             |
| 16 | Selection Left  | The encoder has been pushed in and turned counter clockwise.      |
| 32 | Selection Right | The encoder has been pushed in and turned clockwise.              |
| 64 | Enter           | The encoder has been pushed in and released without being turned. |

n4 is the length of time the encoder button has been pressed. The time the button has been pressed is in units of .01 seconds and the range is [0, 255] or 0 to 2.55 seconds. The button timer starts at the press of the button and is reset to zero when the button is released.

Example: 1,2,32,100,"OK" means the current level is 1, the current selection is 2, the current command state byte is a Selection Right and the button has been held in for 1 second.

## IS

### Input Suggest

Suggests new level and selection. Resets the command state to No Operation.

If Auto Level is enabled, the level is updated and indicated by the encoder LED only if the device's level has not changed by someone turning the encoder. Otherwise, if Auto Level is disabled, the level is updated and indicated by the encoder LED regardless of encoder input.

If either Auto Selection is enabled ("knob push and turn" or "knob bump"), the selection is updated and indicated by the column of LEDs only if the device's selection has not changed by local encoder action. Otherwise, if neither Auto Selection is enabled, the selection is updated and indicated regardless of encoder input.

Send: IS,n1,n2

Where: n1 is the suggested new level. The level range is [0, 31].

If n1 is zero, the level remains unchanged.

n2 is the suggested new selection. The selection range is [0, 8]. If n2 is zero, the selection remains unchanged.

Example: IS,3,5 suggests a new level of 3 and a new selection of 5.

Response: n1,n2,"OK"

Where: n1 is the current level. The level range is [1, 31].

n2 is the current selection. The selection range is [1, 8].

Example: 3,5,"OK" means the current level is 3 and the current selection is 5. This means the suggested level and selection were updated. A response of 10,5,"OK" means the current level is 10 and was last changed by someone turning the encoder and the current selection was updated to 5.

## ISR

### Input Suggest Raw

Same operation as IS Input Suggest except ISR returns the command state byte and button time. Suggests new main level and second level. Resets the command state to No Operation.

If Auto Level is enabled, the level is updated and indicated by the encoder LED only if the device's level has not changed by someone turning the encoder. Otherwise, if Auto Level is disabled, the level is updated and indicated by the encoder LED regardless of encoder input.

If either Auto Selection is enabled ("knob push and turn" or "knob bump"), the selection is updated and indicated by the column of LEDs only if the device's selection has not changed by local encoder action. Otherwise, if neither Auto Selection is enabled, the selection is updated and indicated regardless of encoder input.

Send: ISR,n1,n2

Where: n1 is the suggested new level. The level range is [0, 31].

If n1 is zero, the level remains unchanged.

n2 is the suggested new selection. Selection range is [0, 8]. If n2 is zero, the selection remains unchanged.

Example: ISR,3,5 suggests a new level of 3 and a new selection of 5.

Response: n1,n2,n3,n4,"OK"

Where: n1 is the current level. The level range is [1, 31].

n2 is the current selection. The selection range is [1, 8].  
n3 is the current command state. The command state represents the state of the encoder.

The possible states follow:

- 0 No Operation The encoder has not changed.
- 1 Encoder Left The encoder has been turned counter clockwise.
- 2 Encoder Right The encoder has been turned clockwise
- 16 Selection Left The encoder has been pushed in and turned counter clockwise.
- 32 Selection Right The encoder has been pushed in and turned clockwise.
- 64 Enter The encoder has been pushed in and released without being turned.

n4 is the length of time the encoder button has been pressed. The time the button has been pressed is in units of .01 seconds and the range is [0, 255] or 0 to 2.55 seconds. The button timer starts at the press of the button and is reset to zero when the button is released.

Example: 3,5,0,0,"OK" means the current level is 3, the current selection is 5, the current command state byte is a No Operation and the button is not pushed in. This means the level and selection were updated. A response of 3,7,32,100,"OK" means the current level was updated to 3, the current selection is 7 and was last changed by someone pushing in and turning the encoder, the current command state byte is a Selection Right, and a non-zero button time means someone is still holding the button in.

## IF

Input Force

Forces new level and selection. Resets the command state to No Operation.

The level is updated and indicated by the encoder LED regardless of Auto Level configuration.

The selection is updated and indicated by the column of LEDs regardless of Auto Selection configuration.

Send: IF,n1,n2

Where: n1 is the new level. The level range is [0, 31]. If n1 is zero, the level remains unchanged.

n2 is the new selection. The selection range is [0, 8].

If n2 is zero, the selection remains unchanged.

Example: IF,3,5 sets a new level of 3 and a new selection of 5.

Response: "OK"

## Stored Parameter List (SPL)

Below is a table of stored parameters followed by descriptions of each parameter.

Index	Description	Range of Values	
1	Auto Level	0 – 1	
2	Auto Selection - Knob Push & Turn	0 – 1	
3	Auto Lock	0 – 1	
4	Baud Rate	0 – 4	
5	RW 485 Transmit Delay	2 – 200	
6	Maximum Number of Selections	1 – 8	
7	Knob Push & Turn Selection Roll	0 – 1	
8	Knob Push & Turn Update on Release	0 – 1	
9	Auto Selection - Knob Bump	0 – 1	
10	Knob Bump Update Timer	0 – 5	

### Parameter Descriptions

1. Auto Level configuration affects the result of turning the encoder. Turning the encoder without pushing it in updates the command state to an Encoder Left for a counter clockwise turn or an Encoder Right for a clockwise turn unless the device is locked. If Auto Level is enabled (a value of 1), the level is updated and indicated by the encoder LED as well. The Auto Level configuration also affects the Encoder Input Commands IS and ISR. See Encoder Input Commands section for details.
2. Auto Selection - Knob Push & Turn configuration affects the result of turning the encoder while it is pushed in. Turning the encoder while pushing it in updates the command state to a Selection Left for a counter clockwise turn or a Selection Right for a clockwise turn unless the device is locked. If Auto Selection is enabled (a value of 1), the selection is updated and indicated by the column of LEDs as well. The configuration of this parameter also affects the Encoder Input Commands IS and ISR. See Encoder Input Commands section for details.
3. Auto Lock configuration affects the operation of the device when the lock input is shorted to -V. If the device is configured for Auto Lock (a value of 1) and the Lock input is shorted to -V, the encoder is locked out regardless of the software lock status (see ILK command). If the device is not configured for Auto Lock (a value of 0), the Lock input is ignored and the encoder's lock state is defined by the software lock status.
4. This parameter sets the baud rate of the device. When this parameter is changed via a RW 485 message, the response is sent at the current baud rate, then the baud rate is updated to the new baud rate specified by the value sent. The default setting of 38400 is required for use with Rane controllers (i.e., RPM 88/44/22). It can be restored by holding the encoder in during power-up for several seconds until the encoder LED turns on.

	<b>Factory Setting</b>	<b>Meaning</b>
	1	disabled - enabled
	1	disabled - enabled
	1	disabled - enabled
	2	0 = 9600, 1 = 19200, 2 = 38400, 3 = 57600, 4 = 115200
	10	2 - 200 ms
	8	1 – 8 Selections, ignored if SPL 2 & 9 disabled.
	0	disabled - enabled
	1	disabled - enabled
	0	disabled - enabled
	3	0 - 5 seconds, ignored if SPL 9 disabled.

5. This parameter sets the minimum time in milliseconds the remote waits after receiving a RW 485 message before it transmits a response. It is recommended that this value not be changed. The default setting can be restored by holding the encoder in during power-up for several seconds until the encoder LED turns on.
6. Maximum Number of Selections configures the number of selections that can be accessed by the encoder (Knob Push & Turn and/or Knob Bump). This parameter is ignored if both parameters 2 and 9 are disabled.
7. Knob Push & Turn Selection Roll configures the action taken when the last (bottom) selection is reached and the encoder is pushed and turned. When enabled, the selection wraps around from last to first (or first to last, depending on encoder direction). This parameter is ignored if parameter 2 is disabled.
8. Knob Push & Turn Update on Release configures when the selection index is updated after the encoder is pushed in and turned. When enabled, the SR updates its selection index when the encoder is released, rather than updating each time the encoder is turned. This parameter is ignored if parameter 2 is disabled.
9. Auto Selection - Knob Bump configuration affects the result of bumping the encoder (pushing and releasing the encoder without turning). When enabled, the next selection is automatically chosen; the selection index is updated after the update timer expires. Selections automatically roll from last to first. Configuration of this parameter affects the commands IS and ISR. See Encoder Input Commands section for details.
10. Knob Bump Update Timer determines how long the remote waits before updating its selection index once the encoder is released. Setting this value to 0 updates the index instantly, with every press/release combination of the encoder. Increasing this value allows users to scroll through and preview selections without updating the index on every press. This parameter is ignored if parameter 9 is disabled.

# Smart Remote Specifications

Parameter	Specification	
I/O: Type	RS-485	
.....Impedance	12k	
.....Baud Rate	38400	
	9600	
	19200	
	57600	
	115200	
.....Data Format	N81	
Power Supply Requirement	7 minimum, 16 maximum	
RW 485 Drive Current	28	
<b>SR 4: Supply Current</b>	52	
<b>SR 3: Supply Current</b>	50	
	95	
<b>SR 2: Supply Current</b>	42	
<b>All Units: Agency Listing</b>	CE (EMC)	
	CE (safety) Exempt	
.....Construction	Steel	
	Polycarbonate	
<b>SR 2 / SR 4: Size</b>	4.1" H x 1.7" W x 2.8" D	
<b>SR 3: Size</b>	4.1" H x 1.9" W x 2.8" D	
<b>All Units: Weight</b>	8 oz	
.....Shipping: Size	3.6" H x 11.75" W x 7.2" D	
.....Weight	1 lb 8 oz	

	Limit	Units	Conditions/Comments
			Euroblock connector
	min	$\Omega$	Receive Mode
	<1%	bps	RW 485 baud rate
	<1%	bps	Programmable
			No parity, 8 data bits, 1 stop bit
	min	VDC	DC voltage @ +V referenced to -V
	+1	mA	No termination, communication active. One remote per bus active at a time.
	+5	mA	Communication idle
	+5	mA	Backlight off, communication idle
	+5	mA	Backlight max brightness, communication idle
	+4	mA	Communication idle
			EMC directive 89/336/EEC
			Exempt per article 1, LVD 73/23/EEC
			Chassis
			Lens
			(10.4 cm x 4.3 cm x 7.1 cm)
			(10.4 cm x 4.8 cm x 7.1 cm)
			(.23 kg)
			(9.2 cm x 30 cm x 18 cm)
			(.69 kg)



### Factory Authorized Service

Your unit may be serviced by the Rane Factory or any Authorized Rane Service Center. To find a Service Center near you, please call the Rane factory, or check the Rane website. Please do not return your unit to Rane without prior authorization.

Rane Corporation

To obtain service or a Return Authorization, please phone 425-355-6000  
or Fax 425-347-7757

The current list of U.S. Rane Authorized Service Centers is on our website:

[www.rane.com/service.html](http://www.rane.com/service.html)

### Limited Domestic Warranty

RANE CORPORATION WARRANTS ALL RANE PRODUCTS (EXCEPT THOSE ITEMS CLASSIFIED AS *WEAR PARTS*, AND LISTED ON THE FIRST PAGE OF EACH OPERATORS MANUAL) PURCHASED IN THE U.S. AGAINST DEFECTS IN MATERIAL OR WORKMANSHIP FOR A PERIOD OF TWO (2) YEARS. *WEAR PARTS* ARE LIMITED TO A PERIOD OF NINETY (90) DAYS FROM THE INITIAL DATE OF RETAIL PURCHASE FROM AN AUTHORIZED RANE DEALER—WEAR PARTS REQUIRE PROOF OF PURCHASE DATE. This limited warranty extends to all purchasers or owners of the product during the warranty period beginning with the original retail purchase. Rane Corporation does not, however, warrant its products against any and all defects: 1) arising out of material or workmanship not provided or furnished by Rane, or 2) resulting from abnormal use of the product or use in violation of instructions, or 3) in products repaired or serviced by other than authorized Rane repair facilities, or 4) in products with removed or defaced serial numbers, or 5) in components or parts or products expressly warranted by another manufacturer. Rane agrees to supply all parts and labor to repair or replace defects covered by this limited warranty with parts or products of original or improved design, at its option in each respect, if the defective product is shipped prior to the end of the warranty period to any Rane authorized warranty repair facility in the U.S. or to the Rane factory in the original packaging or a replacement supplied by Rane, with all transportation costs and full insurance paid each way by the purchaser or owner.

## **LIMITED WARRANTY OUTSIDE THE U.S.A.**

RANE PRODUCTS ARE WARRANTED ONLY IN THE COUNTRY WHERE PURCHASED, THROUGH THE AUTHORIZED RANE DISTRIBUTOR IN THAT COUNTRY, AGAINST DEFECTS IN MATERIAL OR WORKMANSHIP, THE SPECIFIC PERIOD OF THIS LIMITED WARRANTY SHALL BE THAT WHICH IS DESCRIBED TO THE ORIGINAL RETAIL PURCHASER BY THE AUTHORIZED RANE DEALER OR DISTRIBUTOR AT THE TIME OF PURCHASE. Rane Corporation does not, however, warrant its products against any and all defects: 1) arising out of materials or workmanship not provided or furnished by Rane, or 2) resulting from abnormal use of the product or use in violation of instructions, or 3) in products repaired or serviced by other than authorized Rane repair facilities, or 4) in products with removed or defaced serial numbers, or 5) in components or parts or products expressly warranted by another manufacturer. Rane agrees, through the applicable authorized distributor, to repair or replace defects covered by this limited warranty with parts or products of original or improved design, at its option in each respect, if the defective product is shipped prior to the end of the warranty period to the designated authorized Rane warranty repair facility in the country where purchased, or to the Rane factory in the U.S., in the original packaging or a replacement supplied by Rane, with all transportation costs and full insurance paid each way by the purchaser or owner.

ALL REMEDIES AND THE MEASURE OF DAMAGES ARE LIMITED TO THE ABOVE SERVICES, IT IS POSSIBLE THAT ECONOMIC LOSS OR INJURY TO PERSON OR PROPERTY MAY RESULT FROM THE FAILURE OF THE PRODUCT; HOWEVER, EVEN IF RANE HAS BEEN ADVISED OF THIS POSSIBILITY, THIS LIMITED WARRANTY DOES NOT COVER ANY SUCH CONSEQUENTIAL OR INCIDENTAL DAMAGES. SOME STATES OR COUNTRIES DO NOT ALLOW THE LIMITATIONS OR EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, ARISING BY LAW, COURSE OF DEALING, COURSE OF PERFORMANCE, USAGE OF TRADE, OR OTHERWISE, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO A PERIOD OF TWO (2) YEARS FROM EITHER THE DATE OF ORIGINAL RETAIL PURCHASE OR, IN THE EVENT NO PROOF OF PURCHASE DATE IS AVAILABLE, THE DATE OF MANUFACTURE, SOME STATES OR COUNTRIES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE, COUNTRY TO COUNTRY.

## Warranty Procedure - Valid in USA only

NOTICE! You must complete and return the warranty card or register your product online to extend the Warranty from 2 years to 3 years!

### TO VALIDATE YOUR EXTENDED WARRANTY

Use the postcard that came in the box with your unit, or go to [www.rane.com](http://www.rane.com) and click on **New Product Registration**. Fill out the warranty completely, being sure to include the model and serial number of the unit since this is how warranties are tracked. If your Rane product was purchased in the U.S.A., mail the completed card or register online with to Rane Corporation within 10 days from the date of purchase. **If you purchased the product outside the U.S.A. you must file your warranty registration with the Rane Distributor in that country.** It is advised that you keep your bill of sale as proof of purchase, should any difficulties arise concerning the registration of the warranty card. **NOTICE: It is not necessary to register in order to receive Rane Corporation's standard two-year limited warranty.**

WARRANTY REGISTRATION is made and tracked by **model and serial numbers only**, not by the purchaser's or owner's name. Therefore any warranty correspondence or inquires **must** include the model and serial number of the product in question. Be sure to fill in the model and serial number in the space provided below and keep this in a safe place for future reference.

WARRANTY SERVICE MUST BE PERFORMED ONLY BY AN AUTHORIZED RANE SERVICE FACILITY LOCATED IN THE COUNTRY WHERE THE UNIT WAS PURCHASED, OR (if product was purchased in the U.S.) AT THE RANE FACTORY IN THE USA. If the product is being sent to Rane for repair, please call the factory for a Return Authorization number. We recommend advance notice be given to the repair facility to avoid possible needless shipment in case the problem can be solved over the phone.

UNAUTHORIZED SERVICE PERFORMED ON ANY RANE PRODUCT WILL VOID ITS EXISTING FACTORY WARRANTY.

## FACTORY SERVICE

If you wish your Rane product to be serviced at the factory, **it must be shipped fully insured, in the original packing box or equivalent.** This warranty will **not** cover repairs on products damaged through improper packaging. If possible, avoid sending products through the U.S. mail. Be sure to include in the package:

1. Complete return street shipping address (P.O. Box numbers are **not** acceptable).
2. A detailed description of any problems experienced, including the make and model numbers of any other system equipment.
3. Remote power supply, if applicable.

Repaired products purchased in the U.S. will be returned prepaid freight via the same method they were sent to Rane. Products purchased in the U.S., but sent to the factory from outside the U.S. **must** include return freight funds, and the sender is fully responsible for all customs procedures, duties, tariffs and deposits.

In order to qualify for Rane's one year extended warranty (for a total of 3 years parts and labor), the warranty must be completely filled out and sent to us immediately. Valid in the USA only.

We recommend you write your serial number here in your owners manual and on your sales receipt for your records.

**SERIAL NUMBER:** \_\_\_\_\_

**PURCHASE DATE:** \_\_\_\_\_

---

©Rane Corporation 10802 47th Ave. W., Mukilteo WA 98275-5000 TEL 425-355-6000 FAX 425-347-7757 WEB [www.rane.com](http://www.rane.com)

---

## Declaration of Conformity

**Application of  
Council directive(s):**

73/23/EEC  
89/336/EEC

**Standard(s) to which  
conformity is declared:**

EN60065:1998  
EN55103-1:1996  
EN55103-2:1996  
ENVIRONMENT E2  
COMMERCIAL AND  
LIGHT INDUSTRIAL

**Manufacturer:**

Rane Corporation  
10802 47th Avenue West  
Mukilteo WA 98275-5098 USA

This equipment has been tested and found to be in compliance with all applicable standards and regulations applying to the EU's Low Voltage (LV) directive 73/23/EEC, and Electromagnetic Compatibility (EMC) directive 89/336/EEC. In order for the customer to maintain compliance with this regulation, high quality shielded cable must be used for interconnection to other equipment. Modification of the equipment, other than that expressly outlined by the manufacturer, is not allowed under this directive. The user of this equipment shall accept full responsibility for compliance with the LV directive and EMC directive in the event that the equipment is modified without written consent of the manufacturer.


**Manufacturer:** Rane Corporation

**Type of Equipment:** Professional Audio Signal Processing

**Models:** SR 2, SR 3, SR 4

**Immunity Results:**  
No susceptibilities observed.

*I, the undersigned, hereby declare that the equipment specified above conforms to the Directive(s) and Standard(s) shown above.*



(Signature)

Roy G. Gill

(Full Name)

Compliance Engineer

(Position)

November 1, 2001

(Date)



Mukilteo WA USA

(Place)



# SR 4

SMART REMOTE

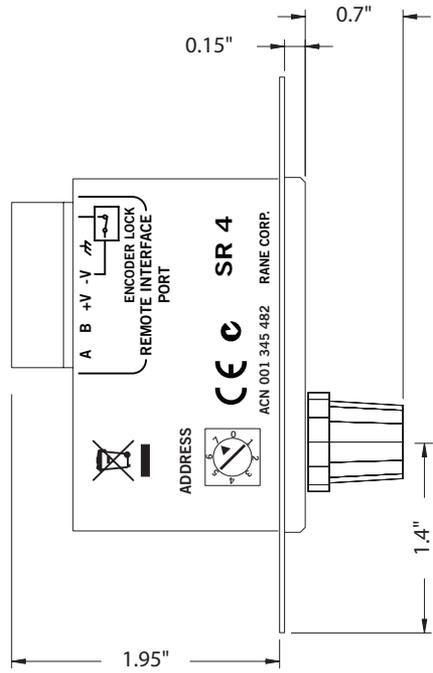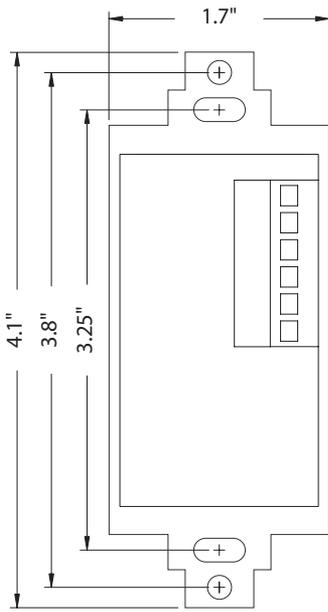

Rane part 14093

